
Hippo-M Mini User Manual

JOIN/FEED CONNECTORS


1. Cut your LED strip to length along the cutting line.




2. Cut the wire to the required length. Insert the wire fully into the connector slot until it reaches the bottom. Close the flip cover and secure both locking clips. Pliers may be used to make the locking process easier.

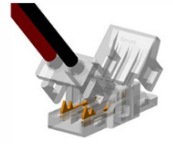

3. Open the connector cover to 90°. Insert the LED strip fully into the connector until its positioned at the bottom. Close the flip cover and secure both locking clips. Pliers may be used to make the locking process easier.

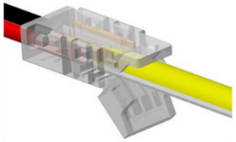

4. Joining connectors are installed using the same process. If an installation error occurs, cut off the affected solder pads and use a new section for reinstallation.

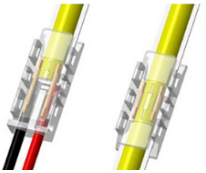


CORNER CONNECTORS


1. Cut your LED strip to length along the cutting line.




2. Open the connector cover to 90°. Insert the LED strip fully into the connector until its sitting at the bottom. Close the flip cover and secure both locking clips. Pliers may be used to make the locking process easier.

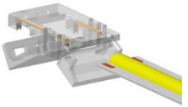

3. Open the connector cover to 90°. Place the LED strip into the upper section of the connector, ensuring the inner side of the strip is positioned against the bottom and ensure that the polarity of the strip is corresponding. Close the flip cover and lock both sides of the connector securely. Use pliers if needed.

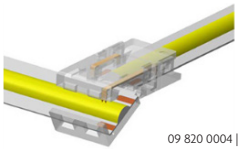

4. Open the connector cover to 90°. Place the LED strip into the upper section of the connector, ensuring the inner side of the strip is positioned against the bottom and ensure that the polarity of the strip is corresponding. Close the flip cover and lock both sides of the connector securely.
Use pliers if needed.

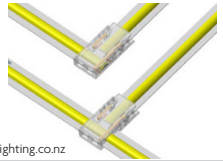

While every effort has been made to ensure the accuracy of all information provided Task Lighting can not be held responsible for any errors. Task Lighting also reserves the right to modify/delete product details without notice.